

MIXER

HIGH
↓ KILL
RESET

MID
↓ KILL
RESET

LOW
↓ KILL
RESET

XFADER
LEFT ON

MONITOR

VOLUME

PLAY
SYNC

PAGES
↓ REVERSE
TEMPO
RANGE

SOURCE
↓ CAPTURE
QUANTIZE

LOOP SIZE
↓ SET
FLUX ON

-
FX1
BEND

+
FX2

PITCH

+

PLAY
SYNC

FILTER
GAIN

MONITOR
MIX

BROWSE
↓ BROWSER VIEW
PLAYLISTS
↓ EXPAND/COLLAPSE

SLOT 1

MUTE
TRIGGER TYPE
PLAY MODE

SLOT 2

MUTE
TRIGGER TYPE
PLAY MODE

SLOT 1

MUTE
TRIGGER TYPE
PLAY MODE

SLOT 2

MUTE
TRIGGER TYPE
PLAY MODE

SLOT 3

MUTE
TRIGGER TYPE
PLAY MODE

SLOT 4

MUTE
TRIGGER TYPE
PLAY MODE

SLOT 3

MUTE
TRIGGER TYPE
PLAY MODE

SLOT 4

MUTE
TRIGGER TYPE
PLAY MODE

DECK C

DECK D

KEYLOCK

FX

MONITOR

PUNCH

DECK C

DECK D

KEYLOCK

FX

MONITOR

PUNCH

XFADER

1
TRIGGER
TYPE
2
PLAY
MODE
C
LOAD
UNLOAD
M1=1
SHIFT
D
LOAD
UNLOAD
CELL
DELETE
MIXER

FILTER
GAIN

MONITOR
VOLUME

PAGES
↓ REVERSE
TEMPO
RANGE

SOURCE
↓ CAPTURE
QUANTIZE

LOOP SIZE
↓ SET
FLUX ON

-
FX1
BEND

+
FX2

PITCH

+

PLAY
SYNC

MIXER

HIGH
↓ KILL
RESET

MID
↓ KILL
RESET

LOW
↓ KILL
RESET

XFADER
RIGHT ON

MONITOR

VOLUME

PLAY
SYNC